


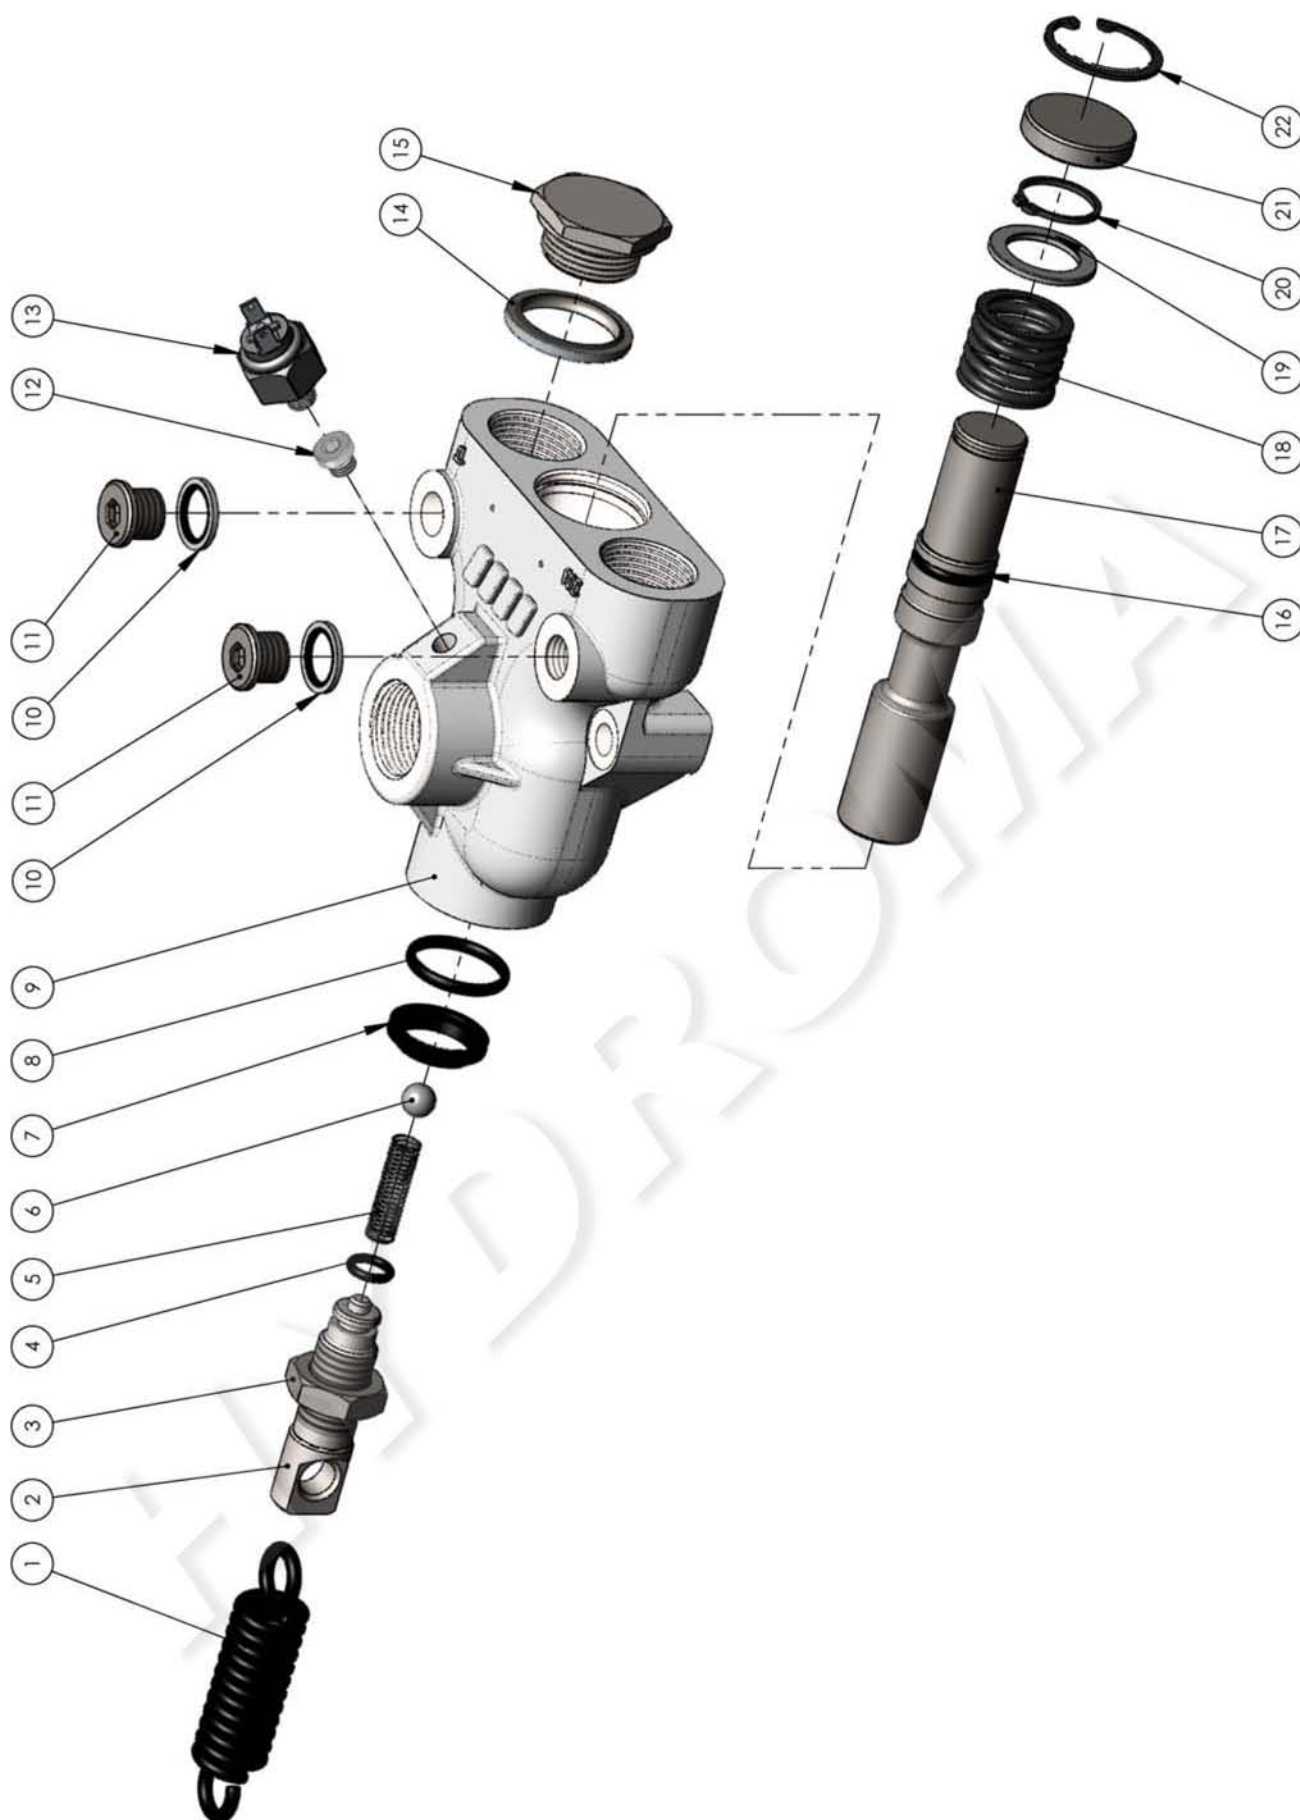


N°	Codice P. Number	Descrizione Description		Quantità Quantity
1	512-003-00092	Molla	Spring	1
2	504-000-00467	Grano	Dowel	1
3	505-000-00161	Dado M20x1,5 CH30 H9	Nut M20x1,5 CH30 H9	1
4	506-002-00041	Guarnizione OR (2,62 x 10,78)	O-Ring (2,62 x 10,78)	1
5	512-005-01339	Molla	Spring	1
6	510-009-00116	Sfera 7/16"	Ball 7/16"	1
7	506-000-01917	Guarnizione raschiatore poliuretano	Polyurethane scraper seal	1
8	506-003-00086	Guarnizione OR (3,53 x 28,17)	O-Ring (3,53 x 28,17)	1
9	520-003-00415	Corpo finecorsa	Limit switch body	1
10	116-009-10085	Rondella acciaio-gomma	Steel-rubber washer	2
11	115-006-00126	Tappo	Plug	2
12	115-009-00016	Tappo acciaio 1/8"	Steel plug 1/8"	1
13	122-009-00011	Idrostop (OPTIONAL)	Pressure switch (OPTIONAL)	1
14	116-009-11002	Rondella acciaio-gomma	Steel-rubber washer	1
15	540-002-00138	Tappo acciaio 1"	Steel plug 1"	1
16	506-003-00022	Guarnizione OR (3,53 x 20,22)	O-Ring (3,53 x 20,22)	1
17	536-003-00529	Cursore Ø 28	Spool Ø 28	1
18	512-006-00517	Molla ritorno cursore	Spool return spring	1
19	529-001-00348	Rondella Ø 25	Washer Ø 25	1
20	501-000-01257	Anello seeger rinforzato	Reinforced seeger ring	1
21	530-000-00211	Distanziale Ø 38	Spacer Ø 38	1
22	501-001-00355	Anello seeger	Circlip	1

Collegamento per impianto a 1 tubo**1 Pipe configuration**

In questa configurazione il RUNSTOP interrompe il flusso dell'olio al cilindro e tutta la mandata viene dirottata allo scarico tramite la valvola di massima del deviatore. Si consiglia l'utilizzo di deviatori con valvole di massima pilotate, come la serie modular "pilot valve".

By this configuration the RUNSTOP valve interrupts the oil flow to the cylinder and the delivery is diverted to the outlet through the relief valve of the main tipping valve. In this case we recommend to use tipping valves c/w piloted relief valves like our modular pilot valve series.

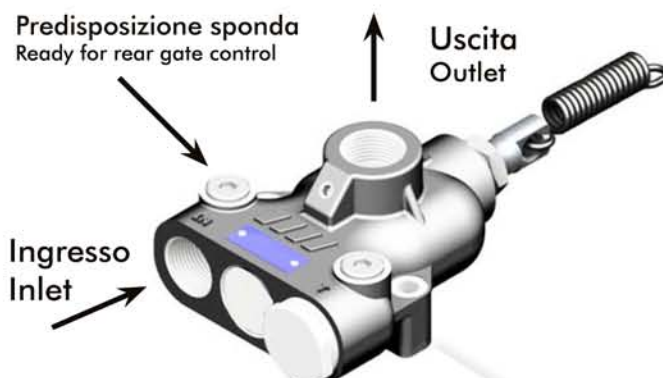**Collegamento per impianto a 2 tubi****2 Pipes configuration**

In questa configurazione il RUNSTOP interrompe il flusso dell'olio al cilindro e tutta la mandata viene dirottata allo scarico tramite il secondo tubo collegato al serbatoio.

By this configuration the RUNSTOP valve interrupts the oil flow to the cylinder and the delivery is diverted to the outlet through the second pipe connected to the oil tank.

