


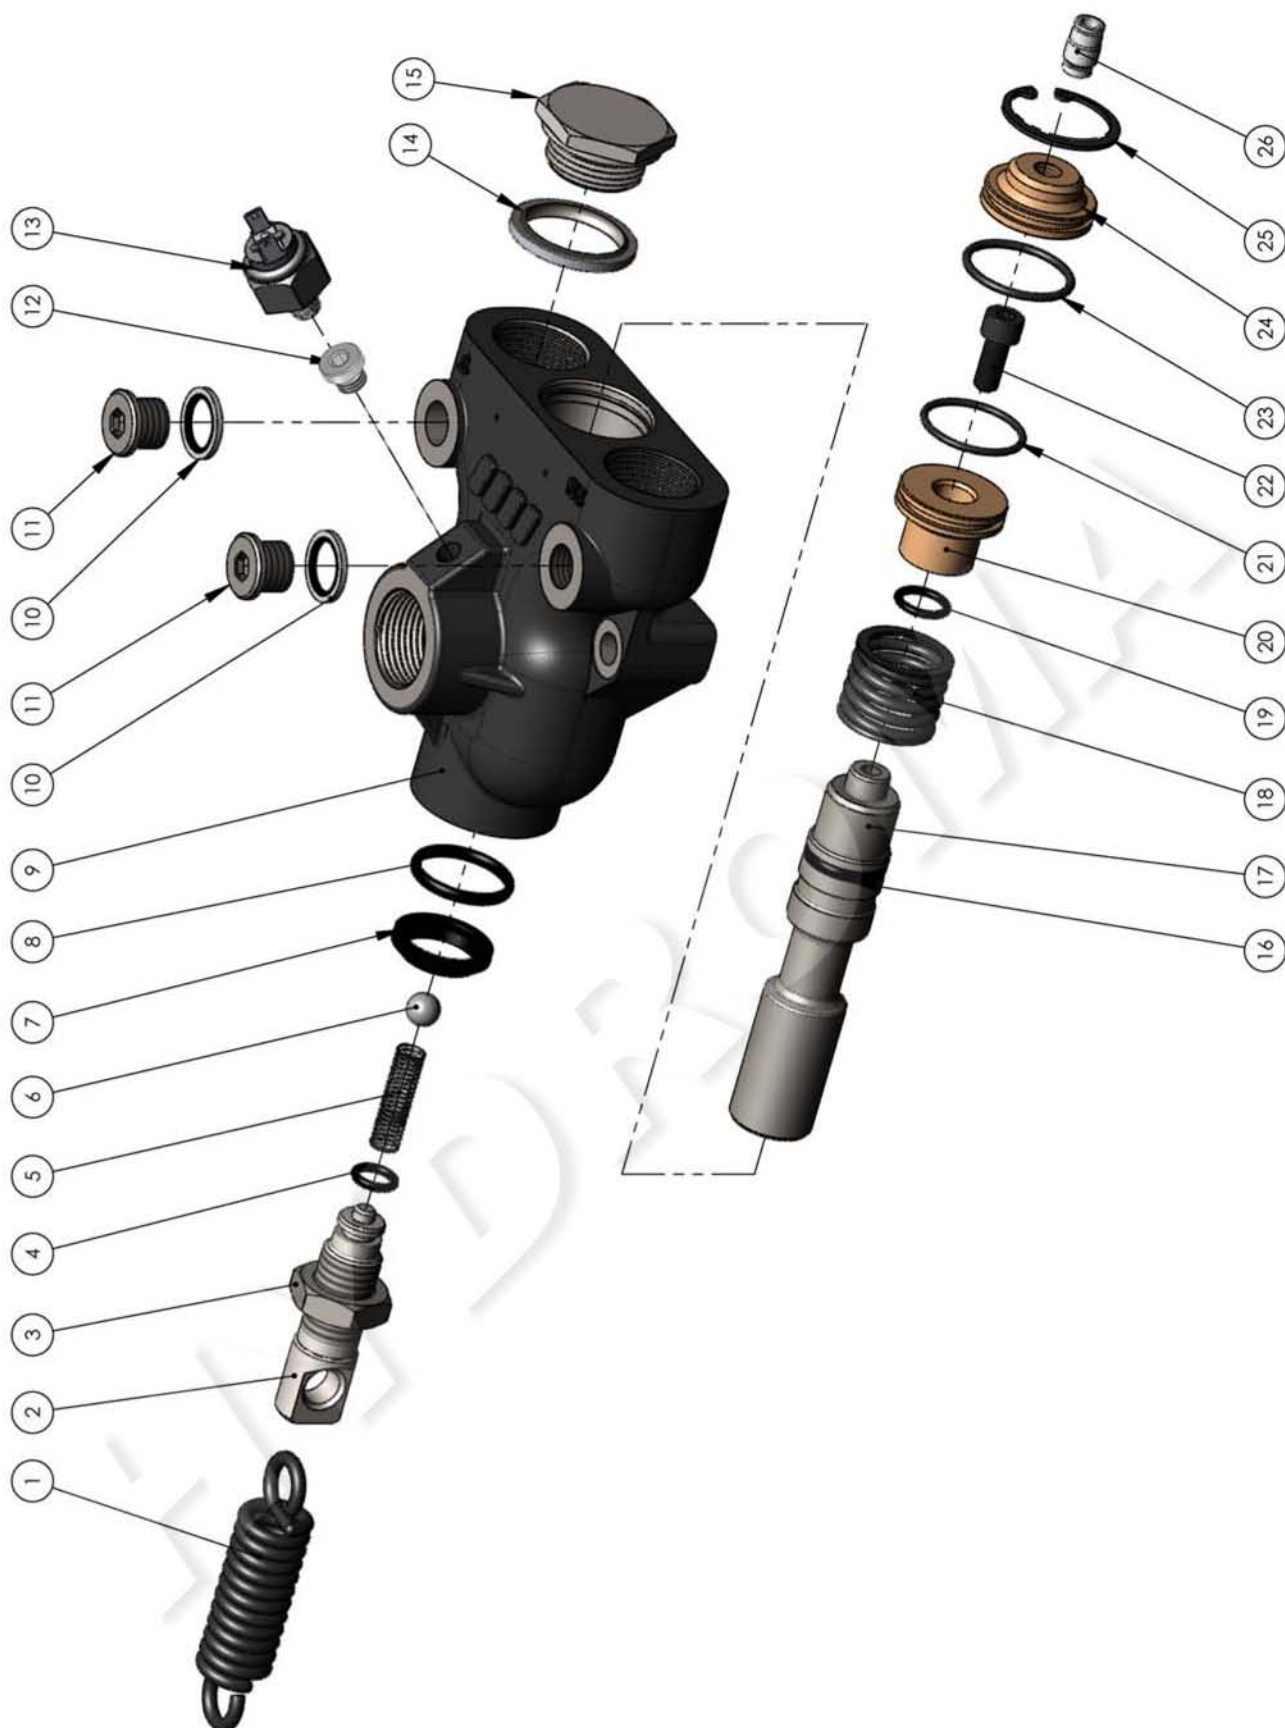

N°	Codice / P. Number	Descrizione / Description		Q.
1	512-003-00092	Molla	Spring	1
2	504-000-00467	Grano	Dowel	1
3	505-000-00161	Dado M20x1,5 CH30 H9	Nut M20x1,5 CH30 H9	1
4	506-002-00041	Guarnizione OR (2,62 x 10,78)	O-Ring (2,62 x 10,78)	1
5	512-005-01339	Molla	Spring	1
6	510-009-00116	Sfera 7/16"	Ball 7/16"	1
7	506-000-01917	Guarnizione raschiatore poliuretano	Polyurethane scraper seal	1
8	506-003-00086	Guarnizione OR (3,53 x 28,17)	O-Ring (3,53 x 28,17)	1
9	520-003-00415	Corpo finecorsa	Limit switch body	1
10	116-009-10085	Rondella acciaio-gomma	Steel-rubber washer	2
11	115-006-00126	Tappo	Plug	2
12	115-009-00016	Tappo acciaio 1/8"	Steel plug 1/8"	1
13	122-009-00011	Idrostop (OPTIONAL)	Pressure switch (OPTIONAL)	1
14	116-009-11002	Rondella acciaio-gomma	Steel-rubber washer	1
15	540-002-00138	Tappo acciaio 1"	Steel plug 1"	1
16	506-003-00022	Guarnizione OR (3,53 x 20,22)	O-Ring (3,53 x 20,22)	1
17	536-003-00663	Cursore Ø 28	Spool Ø 28	1
18	512-006-00517	Molla ritorno cursore finecorsa	Spool return spring	1
19	506-002-00087	Guarnizione OR (2,62 x 13,95)	O-Ring (2,62 x 13,95)	1
20	532-002-00402	Pistone	Piston	1
21	506-002-00256	Guarnizione OR (2,62 x 31,42)	O-Ring (2,62 x 31,42)	1
22	502-003-00548	Vite TCE M8x20	Screw TCE M8x20	1
23	506-002-00265	Guarnizione OR (2,62 x 32,99)	O-Ring (2,62 x 32,99)	1
24	528-001-00233	Flangia	Flange	1
25	501-001-00355	Anello seeger	Circlip	1
26	100-017-00151M	Raccordo aria dritto	Straight air connector	2

Collegamento per impianto a 1 tubo**1 Pipe configuration**


In questa configurazione il RUNSTOP interrompe il flusso dell'olio al cilindro e tutta la mandata viene dirottata allo scarico tramite la valvola di massima del deviatore. Si consiglia l'utilizzo di deviatori con valvole di massima pilotate, come la serie modular "pilot valve".

By this configuration the RUNSTOP valve interrupts the oil flow to the cylinder and the delivery is diverted to the outlet through the relief valve of the main tipping valve. In this case we recommend to use tipping valves c/w piloted relief valves like our modular pilot valve series.

Predisposizione sponda
Ready for rear gate control

Uscita
Outlet

Ingresso
Inlet

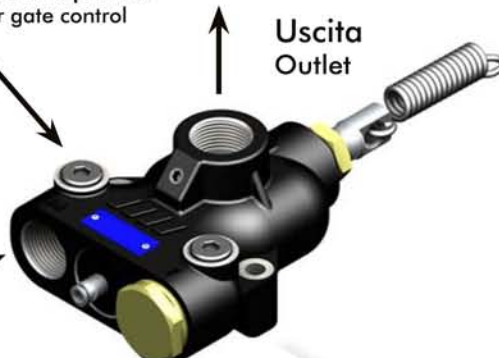**Collegamento per impianto a 2 tubi****2 Pipes configuration**

In questa configurazione il RUNSTOP interrompe il flusso dell'olio al cilindro e tutta la mandata viene dirottata allo scarico tramite il secondo tubo collegato al serbatoio.

By this configuration the RUNSTOP valve interrupts the oil flow to the cylinder and the delivery is diverted to the outlet through the second pipe connected to the oil tank.

Predisposizione sponda
Ready for rear gate control

Uscita
Outlet

Ingresso
Inlet

Serbatoio
Tank

